

# Dovetail Drawer Front Removal

## Dovetail Drawer Front Removal Instructions

Drawer fronts on our dovetail drawers are attached using an attachment disk. This disk is attached to the drawer box and is set into a 35mm cup on the back of the drawer front.



8mm x 11.5mm  
Euroscrew



**To Remove the Drawer Front, using the Attachment Disc, one of the following methods can be used:**

- Loosen the Euroscrew that is attached to the drawer front, adjust the front and retighten the screw.
- Remove the entire front, loosen the disc from the dovetail drawer box, adjust to the desired position, and retighten and reinstall the drawer front.
- A professional cabinet installer can use manual force to adjust the fronts by pushing up or down on the fronts to achieve the desired reveal without loosening the fronts.

Proudly Made in Canada since 1980

[www.superiorcabinets.ca](http://www.superiorcabinets.ca) | .us

 **SUPERIOR**  
CABINETS