Drawer front removal
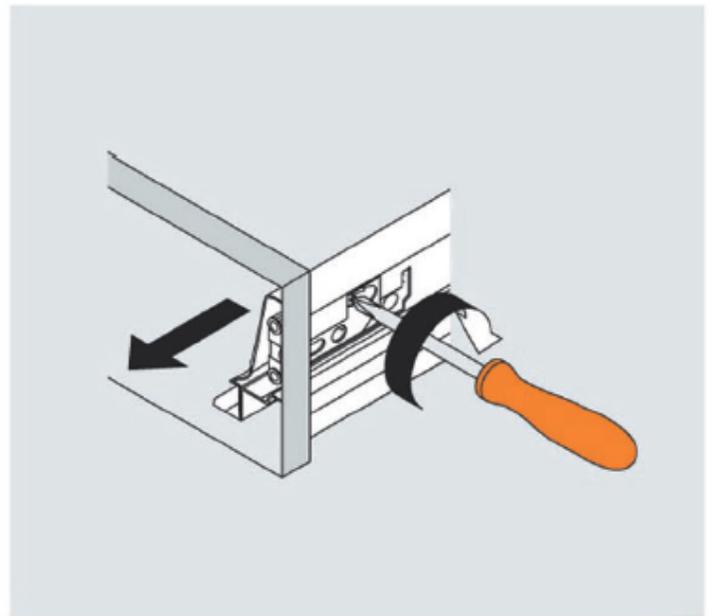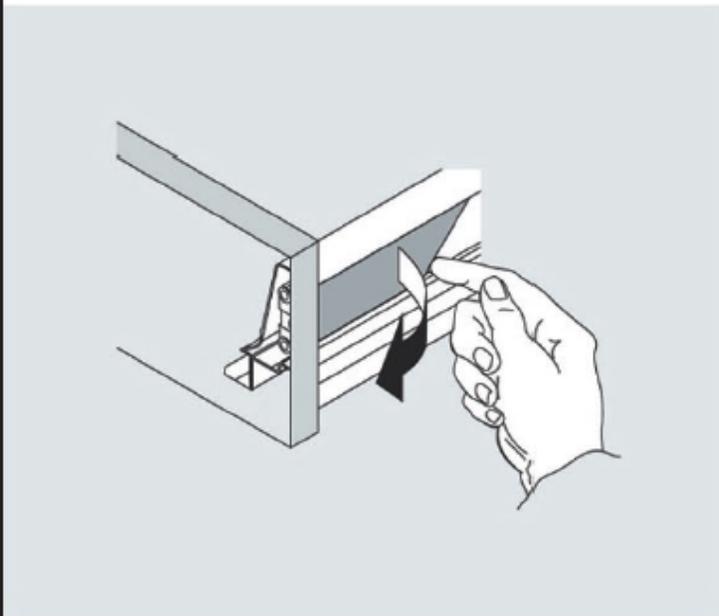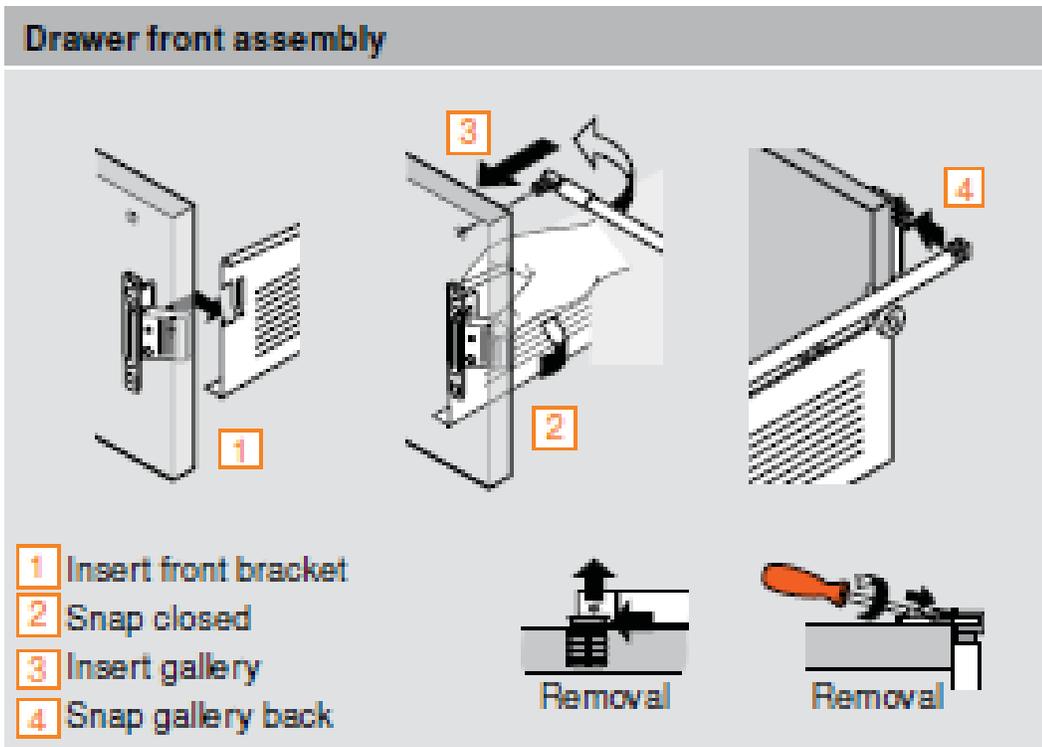

Metabox Drawer Front removal—Pry side lip open and remove front

Drawer front assembly

1 Insert front bracket
2 Snap closed
3 Insert gallery
4 Snap gallery back

Removal

Removal