


Roll Out Installation Instructions:

Determine which cabinet the roll-outs were ordered for. Decide where you want the roll-out located in that cabinet. Bases and pantries have continuous drilling, which will act as a guide to place the roll-outs. Front holes can be used to attach the front spacers. Once lined up and level, mark the back holes for the pilot hole drilling location for the back spacers. If you have ordered your cabinet with at least one rollout, the back holes will line up, and no pilot drilling will be required. Install spacer blocks as shown in the drawing. Then attach the top & bottom of the spacer block using the enclosed 5mm Euro screws. You will need one of these spacers at the front of the cabinet and one at the back of the cabinet. Next, attach the drawer glide using another of the 5mm Euro screws by screwing it through the correct hole in the glide into the bottom hole in the front spacer block. Repeat with the other block at the back of the cabinet. **Be sure to refer to the drawing to determine which holes to use since the drawer glide has several holes.**

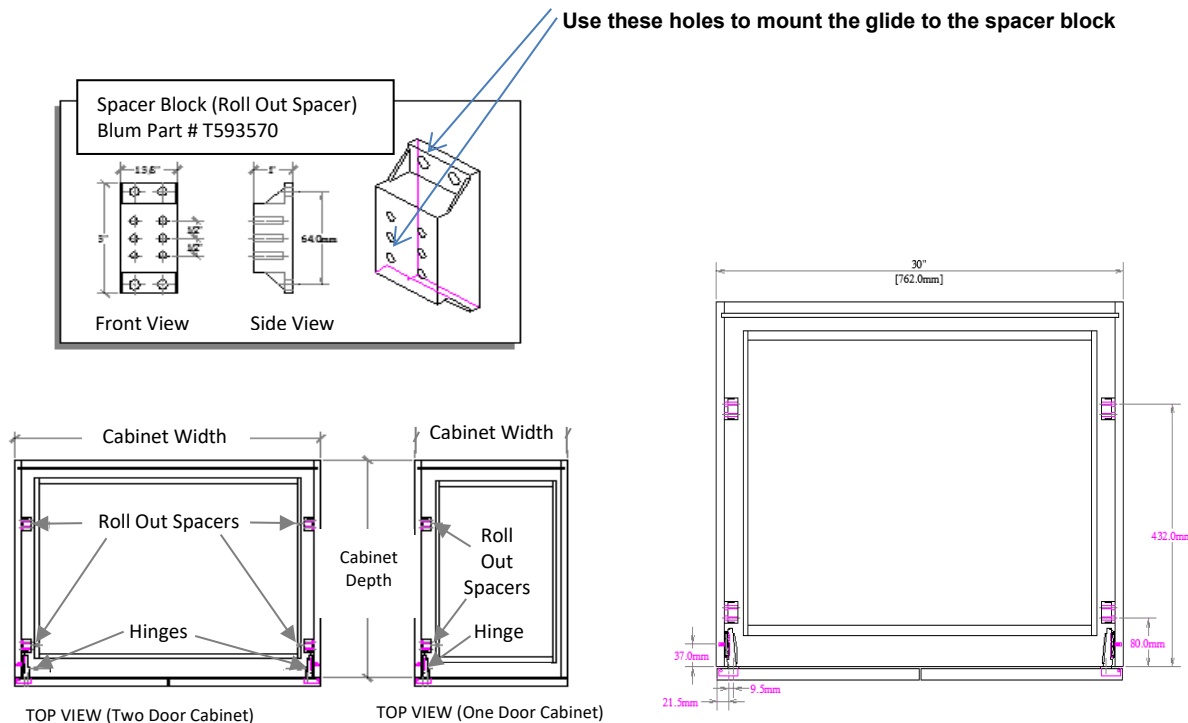


Spacer Locations (hinged sides)

Standard cabinet spacer spacing (adjust back spacer accordingly for depth of cabinet & glides)

Now install the Roll-out drawer box as follows: Holding the front of the drawer box, attach it to the glide by inserting the drawer box above the slide on the drawer glide in the cabinet and sliding it gently back & forth into place.

DO NOT FORCE IT: If the Roll Out does not slide easily into the cabinet, then you have done something incorrectly. Check the previous steps and be sure everything is correctly aligned.

Dovetail Roll Out Subassembly

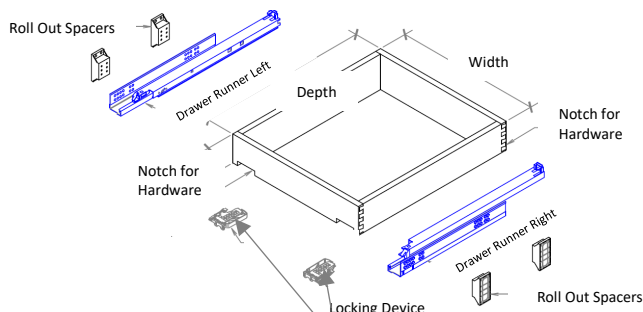

Pinnacle Roll Out Subassembly

